


OUR OBJECTIVES is to make this product provide you with the best output which is manufactured in our modern facilities in a careful working environment, in compliance with total quality concept

GAS COOKER INSTRUCTION MANUAL

The Technical Specifications on the cooker

Specifications		single burner cooker	double burner cooker	3 burner cooker	4 burner cooker	4 burner cooker	3 burner +1electric cooker
Width		285 mm	500 mm	625 mm	510 mm	510 mm	510 mm
Depth		285 mm	285 mm	315 mm	510 mm	510 mm	510 mm
Height		85 mm	85 mm	85 mm	85 mm	125 mm	85 mm
Net weight		1,44 kg	2,28 kg	3,06 kg	4,35 kg	5,8 kg	7,4 kg
	G30 for enj. Diam	Burner gas capacities					
Auxiliary burner	0,70	2,00 Kw	2,00 Kw	2,00 Kw	2,00 Kw	2,00 Kw	2,00 Kw
Normal burner	0,60		1,50 Kw	1,50 Kw	1,50 Kw	1,50 Kw	1,50 Kw
Small burner	0,50			1,00 Kw	1,00 Kw	1,00 Kw	1,00 Kw
	G20 for enj. Diam	Burner gas capacities					
Auxiliary burner	1,10	1,96 kw	1,96 kw	1,96 kw	1,96 kw	1,96 kw	1,96 kw
Normal burner	0,90		1,4 kw	1,4 kw	1,4 kw	1,4 kw	1,4 kw
Normal burner	0,70			0,7 kw	0,7 kw	0,7 kw	0,7 kw
Electric oven							1000 w
Supply voltage							230 V ac
Gas pressure	LPG for G30-30 mbar NG for G20-20 mbar						
Safety	Locking mechanism on the taps						

Warning: all technical specifications has been done under laboratory conditions therefore some technical specifications could be changed according cooking area.

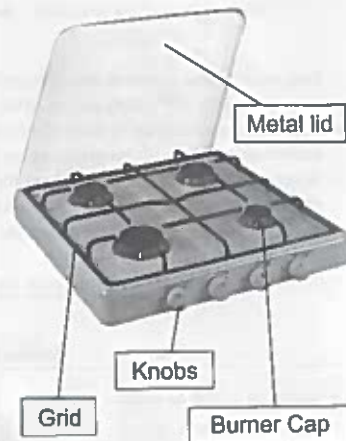

The Important Points Before Start Using gas cooker

- warning natural gas sticker, kindly use your gas cooker only with natural gas.
- * If the gas cooker has got the plug that has earthed system and it has to be used with earthed system socket. The voltage is 230 V. The gas leakage control must be done by soap and the length of gas hose must be less then 125 cm.
 - * The gas hose must be fixed very well. If not, there is some leakage problem for the user. therefore it can be flexible position.
 - * The gas hose and electric cord must be suitable keep for away from warm area of the cooker. It can be damaged and dangerous result for the user. So, if there some damaged problem on the gas hose and electric cord, kindly call the maintenance team and change it immediately.
 - * The kitchen which has got some heating and humidity therefore the air circulation of the kitchen must be well.



1 GAS BURNER



2 GAS BURNER




3 GAS BURNER



4 GAS BURNER



 3 GAS BURNER
1 HOTPLATE

The Assembling Knowledges

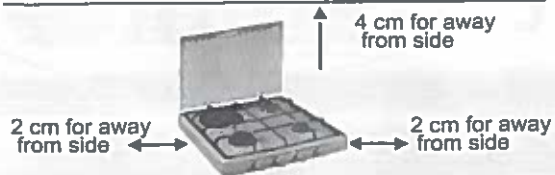

- The gas cooker must be for away 4 cm from behind, 2 cm from left & right sides and 75 cm from the top.
- You keep original box of the gas cooker and come with original box.
- If you don't original boxes
- Gas burner gas grid and caps must be stable. If there is electric cooker, kindly covered it with cartoons.
- You have to be careful to protect surface of the cooker and don't put heavy thing the gas cooker.
- You have to come correct position like up side must be top position and parallel position during coming the gas cooker.

Electric Chat

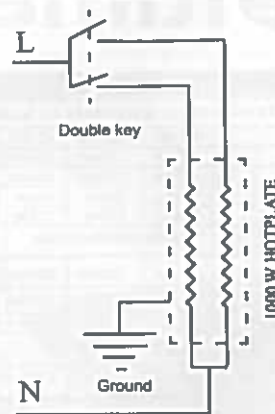

Maintenance and cleaning

Gas and electric cooker cleaning


1. Before start cleaning the cooker must be unplugged position.
2. You can be cleaning your cooker so easy. Don't use hard cleaning tools.
3. Pls use soft cleaning textile and soft cleaning detergent to clean the burner and burner cap.
4. If you have electric cooker pls. read useful information for electric cooker part. Kindly use cream cleaning detergent to clean your gas cooker .



- Don't put the gas burner and burner cap to the dish washer for cleaning them.
- For dirty area of your gas cooker, kindly use hard cleaning equipments under instruction rules.
- The enamellings parts of the top grid of gas cooker than can be last some enamellings parts after used some times but it can be used like this.
- If you have gas cooker with glass cover, you must use glass cleaning detergent for cleaning it.
- If you want to come out the glass lid, please do it upright position and then come out of the glass lid.

The Connection Gas Hose :

The gas hose put warm and waited 1 minutes inside warm water. after that it can be connected the gas cooker and fix it well. The other side of the gas hose must be connected the gas regulator or naturel gas value and then it can be gas leakage control.

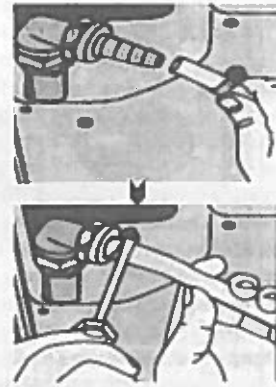


The Gas Leakage Control :

All the switches must be off position and lpg cylinder must be open. You have to use soap to check the gas leakage. If there any dangerous gas leakage, you can see some balloons. If you see like these balloons. You have to check the connection again.



ATTENTION!
Don't control by match

Useful informations

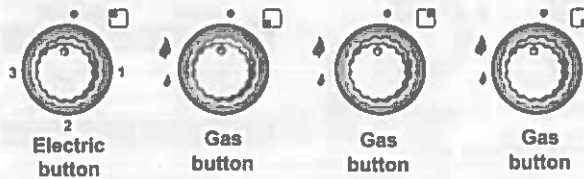

Electric hot plate knob



Useful Information cooker

The surface cooker has got protection material. So it is so much better for first time using to use the cooker with maximum position during 5 minutes.

- The cooking materials bottom plate must be flat to use best advantage of the heating
- you have to use suitable cooking items to the cooker.
- you have to use dry cooking appliances the handle and the cover of cooking appliances must be dry also
- when you finish using cooker, you have to wait till it will be getting cold. And then you can start cleaning it with wet textile
- After you finish cleaning of the cooker you can start working it only a few minutes to be dry.
- The covered stainless steel of the electric hot plates view of the color might be changed after used a few times but there is no objectionable for the user.

The knobs positions	1	2	3
Position Type	Keep warm	Low temperature warming position	Frying and boiling position

